

Make	OEM battery	ProTama Lithion-ion Digital Battery	"NBC" ProTama Charging Plate	Prod. Code
Canon	BP-511	PT-BP512	NBC-CAN BP511, BP512, BP522, BP535, NB2LH, NB2L14	NBC-CAN2
	NB-1LH	PT-NB1LH	NBC-CAN NB1L, NB3L, KM KLB4, NP500, NP600	NBC-CAN4
	NB-2LH	PT-NB-2LH	NBC-CAN BP511, BP512, BP522, BP535, NB2LH, NB2L14	NBC-CAN2
	NB-3L	PT-NB3L	NBC-CAN NB1L, NB3L, KM KLB4, NP500, NP600	NBC-CAN4
	NB-4L	PT-NB4L	NBC-CAN NB4L, NB5L, BP208, BP308, BP315	NBC-CAN3
	NB-5L	PT-NB5L	NBC-CAN NB4L, NB5L, BP208, BP308, BP315	NBC-CAN3
	NB-5H	PT-NB5H	n/a	n/a
	NB-6L	PT-NB-6L	NBC-CAN BP808, 809, NB6L, NB7L, LPE5	NBC-CAN1
	NB-7L	PT-NB-7L	NBC-CAN BP808, 809, NB6L, NB7L, LPE5	NBC-CAN1
	LP-E5	PT-LP-E5	NBC-CAN BP808, 809, NB6L, NB7L, LPE5	NBC-CAN1
	BP-2L14	PT-NB2L14	NBC-CAN BP511, BP512, BP522, BP535, NB2LH, NB2L14	NBC-CAN2
	BP-308	n/a	NBC-CAN NB4L, NB5L, BP208, BP308, BP315	NBC-CAN3
	BP-500 series	PT-BP-512, PT-BP535	NBC-CAN BP511, BP512, BP522, BP535, NB2LH, NB2L14	NBC-CAN2
	BP-809	n/a	NBC-CAN BP808, 809, NB6L, NB7L, LPE5	NBC-CAN1
	BP-915 series	PT-BP930	NBC-CAN BP915, BP930, BP945	n/a
	BP-208	PT-BP-208	NBC-CAN NB4L, NB5L, BP208, BP308, BP315	NBC-CAN3
	NB4-300/200/100	4xAA	n/a	n/a
	Casio	NP-20C	PT-NP20	NBC-CAS NP20C, NP40C, FUJ NP80F, NP100F, KOD KLIC3000, RIC DB20,
NP-30C		PT-NP60/DL12	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
NP-40C		PT-NP40C	NBC-CAS NP20C, NP40C, FUJ NP80F, NP100F, KOD KLIC3000, RIC DB20,	NBC-CAS1
NP-50C		PT-NP50C	NBC-CAS NP50C, NP60C, NP70C, NP100C	NBC-CAS2
NP-60C		PT-NP60C	NBC-CAS NP50C, NP60C, NP70C, NP100C	NBC-CAS2
NP-70C		n/a	NBC-CAS NP50C, NP60C, NP70C, NP100C	NBC-CAS2
NP-100C		n/a	NBC-CAS NP50C, NP60C, NP70C, NP100C	NBC-CAS2
Fuji		NP-30	PT-NP30	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50
	NP-40	PT-NP40F/DL18	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
	NP-45	PT-Li42B/ENEL10	NBC-FUJ NP45F, NP50F, NP70F, NP140F, PEN DLI68, PAN S005	NBC-FUJ2
	NP-50	PT-NP-50F/DLI-68	NBC-FUJ NP45F, NP50F, NP70F, NP140F, PEN DLI68, PAN S005	NBC-FUJ2
	NP-60	PT-NP60/DL12	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
	NP-70	PT-S005E/NP70	NBC-FUJ NP45F, NP50F, NP70F, NP140F, PEN DLI68, PAN S005	NBC-FUJ2

Make	OEM battery	ProTama Lithion-ion Digital Battery	"NBC" ProTama Charging Plate	Prod. Code	
	NP-80	PT-NP80/DB20	NBC-CAS NP20C, NP40C, FUJ NP80F, NP100F, KOD KLIC3000, RIC DB20,	NBC-CAS1	
	NP-95	PT-NP95	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1	
	NP-100	n/a	NBC-CAS NP20C, NP40C, FUJ NP80F, NP100F, RIC DB20	NBC-CAS1	
	NP-120	PT-NP120/DL17	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1	
	NP-140	PT-NP-140	NBC-FUJ NP45F, NP50F, NP70F, NP140F, PEN DLi68, PAN S005	NBC-FUJ2	
	NP-150	PT-NP150	NBC-NIK ENEL3/3e, ENEL8, ENEL10, ENEL11, PEN DLi78, FUJ NP150F, OLY Li60B	NBC-NIK1	
Nikon	ENEL1	PT-ENEL1/NP800	NBC-NIK ENEL1, ENEL2, ENEL9	NBC-NIK3	
	ENEL2	PT-ENEL2	NBC-NIK ENEL1, ENEL2, ENEL9	NBC-NIK3	
	ENEL3	PT-ENEL3E	NBC-NIK ENEL3/3e, ENEL8, ENEL10, ENEL11, PEN DLi78, FUJ NP150F, OLY Li60B	NBC-NIK1	
	ENEL5	PT-ENEL5	NBC-NIK ENEL5, ENEL7, ENEL12	NBC-NIK2	
	ENEL7	n/a	NBC-NIK ENEL5, ENEL7, ENEL12	NBC-NIK2	
	ENEL8	PT-ENEL8	NBC-NIK ENEL3/3e, ENEL8, ENEL10, ENEL11, PEN DLi78, FUJ NP150F, OLY Li60B	NBC-NIK1	
	ENEL9	PT-ENEL9	NBC-NIK ENEL1, ENEL2, ENEL9	NBC-NIK3	
	ENEL10	PT-Li42B/ENEL10	NBC-NIK ENEL3/3e, ENEL8, ENEL10, ENEL11, PEN DLi78, FUJ NP150F, OLY Li60B	NBC-NIK1	
	ENEL11	PT-ENEL11/DLi78	NBC-NIK ENEL3/3e, ENEL8, ENEL10, ENEL11, PEN DLi78, FUJ NP150F, OLY Li60B	NBC-NIK1	
	ENEL12	PT-ENEL12	NBC-NIK ENEL5, ENEL7, ENEL12	NBC-NIK2	
	EH-NH1-B2	2xAA	n/a	n/a	
	Olympus	Li-12B, Li10B	PT-Li12B/DBL10	NBC-OLY BLM1, Li10B, Li30B, Li40B, ENEL10, PEN DLi63, SAN DBL10	NBC-OLY1
BLM1		PT-BLM1	NBC-OLY BLM1, Li10B, Li30B, Li40B, ENEL10, PEN DLi63, SAN DBL10	NBC-OLY1	
BLS1		PT-BLS1	NBC-OLY BLS1, Li50B, PEN DLi92, SAN DBL20, DBL40	NBC-SAN1	
Li-20		PT-NP60/DL12	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1	
Li-30B		PT-Li30B	NBC-OLY BLM1, Li10B, Li30B, Li40B, ENEL10, PEN DLi63, SAN DBL10	NBC-OLY1	
Li-42B, Li-40B		PT-Li42B/ENEL10	NBC-OLY BLM1, Li10B, Li30B, Li40B, ENEL10, PEN DLi63, SAN DBL10	NBC-OLY1	
Li-50B		PT-Li50B	NBC-OLY BLS1, Li50B, PEN DLi92, SAN DBL20, DBL40	NBC-SAN1	
Li-60B		PT-ENEL11/DLi78	NBC-NIK ENEL3/3e, ENEL8, ENEL10, ENEL11, PEN DLi78, FUJ NP150F, OLY Li60B	NBC-NIK1	
CRV3 rechargeable		CRV3 rechargeable	NBC-KOD KLIC8000, CRV3	NBC-KOD1	

Make	OEM battery	ProTama Lithion-ion Digital Battery	"NBC" ProTama Charging Plate	Prod. Code
Panasonic	VBD070/CGA-DU07	PT-DU07	NBC-PAN S303, DU07, DU14, DU21, VBG130, VBG260	NBC-PAN3
	CGADU14A1B	PT-DU14	NBC-PAN S303, DU07, DU14, DU21, VBG130, VBG260	NBC-PAN3
	CGADU21A1B	PT-DU21	NBC-PAN S303, DU07, DU14, DU21, VBG130, VBG260	NBC-PAN3
	CGAS002A1B	PT-S002/BM7	NBC-PAN S001, S002, S006, S602, BLB13	NBC-PAN2
	CGRS003A1B	PT-S003	NBC-PAN S003, S005, S007, S008, BCE10, S101, RIC DB60, DB70	NBC-PAN1
	CGRS004A1B	PT-NP40F/DL18	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
	CGAAS005A1B	PT-S005E/NP70	NBC-PAN S003, S005, S007, S008, BCE10, S101, RIC DB60, DB70	NBC-PAN1
	CGRS006A1B	PT-S006	NBC-PAN S001, S002, S006, S602, BLB13	NBC-PAN2
	CGAAS007A1B	PT-S007	NBC-PAN S003, S005, S007, S008, BCE10, S101, RIC DB60, DB70	NBC-PAN1
	CGAAS008A1B	PT-S008	NBC-PAN S003, S005, S007, S008, BCE10, S101, RIC DB60, DB70	NBC-PAN1
	BMW-BLB13	PT-BLB13	NBC-PAN S001, S002, S006, S602, BLB13	NBC-PAN2
	DMW-BCF10	PT-BCF10	NBC-JVC BNV808, BNV815, BNV823, PAN BCF10, BCG10	NBC-JVC2
	DMW-BCG10	PT-BCG10	NBC-JVC BNV808, BNV815, BNV823, PAN BCF10, BCG10	NBC-JVC2
	VBG-130, VBG-260	n/a	NBC-PAN S303, DU07, DU14, DU21, VBG130, VBG260	NBC-PAN3
	CGA-S303	PT-S303	NBC-PAN S303, DU07, DU14, DU21, VBG130, VBG260	NBC-PAN3
	Pentax	DL-12	PT-NP60/DL12	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50
DL-17		PT-NP120/DL17	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
DL-18		PT-NP40F/DL18	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
DL-i50		PT-NP400/D-Li50	NBC-KM NP400, NP700, PEN DLi50, DLi72, SAN DBL30	NBC-KMIN1
DL-i63		PT-Li42B/ENEL10	NBC-OLY BLM1, Li10B, Li30B, Li40B, ENEL10, PEN DLi63, SAN DBL10	NBC-OLY1
DL-i68		PT-NP-50F/DLi-68	NBC-FUJ NP45F, NP50F, NP70F, NP140F, PEN DLi68, PAN S005	NBC-KOD3
DL-i72		PT-NP700/DBL30/DLi72	NBC-KM NP400, NP700, PEN DLi50, DLi72, SAN DBL30	NBC-KMIN1
DL-i78		PT-ENEL11/DLi78	NBC-NIK ENEL3/3e, ENEL8, ENEL10, ENEL11, PEN DLi78, FUJ NP150F, OLY Li60B	NBC-NIK1
DL-i88		PT-DLi88	NBC-SON BG1, FG1, BK1, NPFF, PEN DLi88, SAN DBL80	NBC-SON3
DL-i90		PT-DLi90	n/a	n/a
DL-i92		PT-Li50B	NBC-OLY BLS1, Li50B, PEN DLi92, SAN DBL20, DBL40	NBC-SAN1

Make	OEM battery	ProTama Lithion-ion Digital Battery	"NBC" ProTama Charging Plate	Prod. Code
Ricoh	DB20	PT-NP80/DB20	NBC-CAS NP20C, NP40C, FUJ NP80F, NP100F, KOD KLIC3000, RIC DB20,	NBC-CAS1
	DB40	PT-NP60/DL12	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
	DB43	PT-NP120/DL17	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
	DB60	PT-S005E/NP70	NBC-PAN S003, S005, S007, S008, BCE10, S101, RIC DB60, DB70	NBC-PAN1
	DB70	PT-S008	NBC-PAN S003, S005, S007, S008, BCE10, S101, RIC DB60, DB70	NBC-PAN1
Sony	NH-AA-B2E	2xAA	n/a	n/a
	NH-AA-B4E	4xAA	n/a	n/a
	NP-FG1	PT-NP-FG1	NBC-SON BG1, FG1, BK1, NPFF, PEN DLI88, SAN DBL80	NBC-SON3
	NP-BK1	n/a	NBC-SON BG1, FG1, BK1, NPFF, PEN DLI88, SAN DBL80	NBC-SON3
	NP-BD1	PT-NP-BD1	NBC-SON BD1, FT1, FR1, FE1, FS11, FS22	NBC-SON1
	NP-BG1/SG1	PT-NP-FG1	NBC-SON BG1, FG1, BK1, NPFF, PEN DLI88, SAN DBL80	NBC-SON3
	C series batteries	PT-NPFC11	NBC-SON FC10, FA50, FA70	n/a
	E series batteries	PT-NPFE1	NBC-SON BD1, FT1, FR1, FE1, FS11, FS22	NBC-SON1
	NP-FM500H	PT-NP-FM500H	NBC-SON NPF, NPFM, NPQM, NPFP, NPFH	NBC-SON2
	R series batteries	PT-NPFR1	NBC-SON BD1, FT1, FR1, FE1, FS11, FS22	NBC-SON1
	T series batteries	PT-NPFT1	NBC-SON BD1, FT1, FR1, FE1, FS11, FS22	NBC-SON1
	L series batteries	PT-NPF550, PT-NPF750, NPF960	NBC-SON NPF, NPFM, NPQM, NPFP, NPFH	NBC-SON2
	M series batteries	n/a	NBC-SON NPF, NPFM, NPQM, NPFP, NPFH	NBC-SON2
	P series batteries	PT-NP-FP50, PT-NP-FP50, NP-FP70	NBC-SON NPF, NPFM, NPQM, NPFP, NPFH	NBC-SON2
	S series batteries	PT-NPFS21	NBC-SON BD1, FT1, FR1, FE1, FS11, FS22	NBC-SON1
	A series batteries	PT-NP-FA50, PT-NP-FA70	NBC-SON FC10, FA50, FA70	n/a
	FF series batteries	n/a	NBC-SON BG1, FG1, BK1, NPFF, PEN DLI88, SAN DBL80	NBC-SON3
	NP-FH50	PT-NP-FH50	NBC-SON NPF, NPFM, NPQM, NPFP, NPFH	NBC-SON2
JVC	BN-V408	PT-V416	NBC-JVC BNV107, BNV114, BNV408, BNV416	NBC-JVC1
	BN-V107	n/a	NBC-JVC BNV107, BNV114, BNV408, BNV416	NBC-JVC1
	BN-V507	PT-V507, PT-V514	n/a	n/a
	BN-V707U	PT-BN-VF707U, PT-BN-VF714U	NBC-JVC BNV707, BNV714	NBC-JVC3
	BN-V808	n/a	NBC-JVC BNV808, BNV815, BNV823, PAN BCF10, BCG10	NBC-JVC2

Make	OEM battery	ProTama Lithion-ion Digital Battery	"NBC" ProTama Charging Plate	Prod. Code
Kodak	KLIC-3000	PT-NP80	NBC-CAS NP20C, NP40C, FUJ NP80F, NP100F, KOD KLIC3000, RIC DB20,	NBC-CAS1
	KLIC-5000	PT-NP60/DL12	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
	KLIC-5001	PT-KLIC5001	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
	KLIC-7000	PT-KLIC7000	NBC-KOD KLIC7000, 7003, 7004, 7006, PEN DLI68, FUJ NP50F	NBC-KOD3
	KLIC-7001	PT-KLIC7001	NBC-KOD KLIC7001, 7002, 7005	NBC-KOD2
	KLIC-7002	PT-KLIC7002	NBC-KOD KLIC7001, 7002, 7005	NBC-KOD2
	KLIC-7003	PT-KLIC7003	NBC-KOD KLIC7000, 7003, 7004, 7006, PEN DLI68, FUJ NP50F	NBC-KOD3
	KLIC-7004	PT-NP-50F/DLI-68	NBC-KOD KLIC7000, 7003, 7004, 7006, PEN DLI68, FUJ NP50F	NBC-KOD3
	KLIC-7005	PT-NP40F/DL18	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
	KLIC-7006	PT-Li42B/ENEL10	NBC-FUJ NP45F, NP50F, NP70F, NP140F, PEN DLI68, OLY Li42B, NIK ENEL10, PAN S005	NBC-OLY1
	KLIC-8000	PT-KLIC8000	NBC-KOD KLIC8000, CRV3	NBC-KOD1
	Konica	NP-500	PT-NP600/NP500	NBC-CAN NB1L, NB3L, KM KLB4, NP500, NP600
NP-600		PT-NP600/NP500	NBC-CAN NB1L, NB3L, KM KLB4, NP500, NP600	NBC-CAN4
NP-800		PT-ENEL1/NP800	NBC-NIK ENEL1, ENEL2, ENEL9	NBC-NIK3
KLB4		PT-NP600/NP500	NBC-CAN NB1L, NB3L, KM KLB4, NP500, NP600	NBC-CAN4
Minolta	NP-1	PT-NP40F/DL18	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
	NP-200	PT-NP200	NBC-KM NP200	n/a
	NP-400	PT-NP400/D-Li50	NBC-KM NP400, NP700, PEN DLI50, DLI72, SAN DBL30	NBC-KMIN1
	NP-700	PT-NP700/DBL30/DLI72	NBC-KM NP400, NP700, PEN DLI50, DLI72, SAN DBL30	NBC-KMIN1
	NP-900	PT-NP900	n/a	n/a
Sanyo	DB-L10A	PT-LI12B/DBL10	NBC-OLY BLM1, Li10B, Li30B, Li40B, ENEL10, PEN DLI63, SAN DBL10	NBC-OLY1
	DB-L20/C1	PT-DBL20	NBC-OLY BLS1, Li50B, PEN DLI92, SAN DBL20, DBL40	NBC-SAN1
	DB-L30A	PT-NP700/DBL30/DLI72	NBC-KM NP400, NP700, PEN DLI50, DLI72, SAN DBL30	NBC-KMIN1
	DB-L40	PT-DBL40	NBC-OLY BLS1, Li50B, PEN DLI92, SAN DBL20, DBL40	NBC-SAN1
	DB-L50	PT-KLIC5001	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
	DB-L80	PT-DL88	NBC-SON BG1, FG1, BK1, NPFF, PEN DLI88, SAN DBL80	NBC-SON3

Make	OEM battery	ProTama Lithion-ion Digital Battery	"NBC" ProTama Charging Plate	Prod. Code
Samsung	SB-LSM80	PT-SBLSM80	NBC-SAM SBL110, SBL220, SLB1937, SBL1947, SM80, SM160, SBL160, SBL320	NBC-SAM1
	SB-L110	PT-SBL110/SBLS70	NBC-SAM SBL110, SBL220, SLB1937, SBL1947, SM80, SM160, SBL160, SBL320	NBC-SAM1
	SBL-110A	PT-SBL-160/110A	n/a	n/a
	SBL-160	PT-SBL-160/110A	n/a	n/a
	SB-L220	PT-SBL220	NBC-SAM SBL110, SBL220, SLB1937, SBL1947, SM80, SM160, SBL160, SBL320	NBC-SAM1
	SB-L320	PT-SBL320	NBC-SAM SBL110, SBL220, SLB1937, SBL1947, SM80, SM160, SBL160, SBL320	NBC-SAM1
	SLB-10A	PT-SLB-10A	NBC-SAM SLB10A, SBP90, SBP180, H82	NBC-SAM3
	SLB-0637	PT-NP700/DBL30/DLi72	NBC-KM NP400, NP700, PEN DLi50, DLi72, SAN DBL30	NBC-KMIN1
	SLB-0737	PT-NP40F/DL18	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
	SLB-0737B	PT-NP40F/DL18	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
	SLB-0837	PT-SLB0837	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
	SLB-0837B	PT-SLB0837B	NBC-SAM SLB0837B, SLB1137C, SLB1137D, SLB0937	NBC-SAM2
	SLB-0937	n/a	NBC-SAM SLB0837B, SLB1137C, SLB1137D, SLB0937	NBC-SAM2
	SLB-1037	PT-NP60/DL12	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
	SLB-1137	PT-NP60/DL12	NBC-FUJ NP30F, NP40F, NP60F, NP95F, NP120F, CAS NP30C, KOD KLIC5001, KLIC5000, PAN S004, SAM SLB0737, SLB0737B, SLB0837, SLB1037, SLB1137, OLY Li20, PEN DL12, DL17, DL18, SAN DBL50	NBC-FUJ1
	SLB-1137C	PT-SLB1137C	NBC-SAM SLB0837B, SLB1137C, SLB1137D, SLB0937	NBC-SAM2
	SLB-1137D	PT-CP-SLB-1137D	NBC-SAM SLB0837B, SLB1137C, SLB1137D, SLB0937	NBC-SAM2
	SLB-1674	PT-NP400/D-Li50	NBC-KM NP400, NP700, PEN DLi50, DLi72, SAN DBL30	NBC-KMIN1